


Networking Euracoms

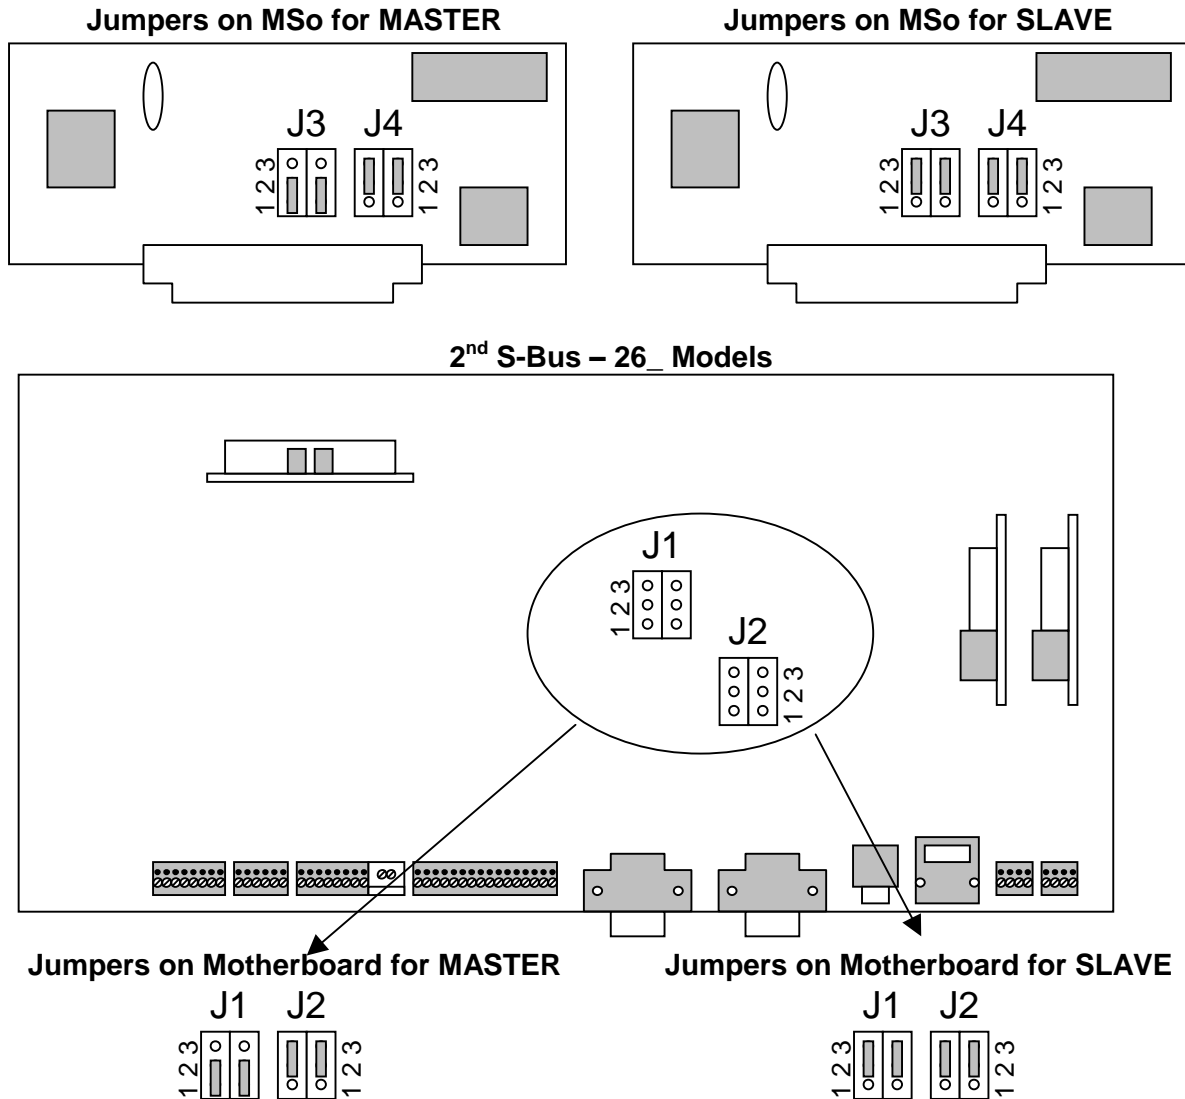

Programming:

(M= do on master, s= do on slave)

- 1) M - #*0044# (define as networked)
S - #*0044# (define as networked)
- 2) M - #*0030# (define as MASTER)
S - #*0031# (define as SLAVE)
- 3) M - #*005x2# (define protocol for network, x = So bus connection)
S - #*005x2# (define protocol for network, x = So bus connection)
- 4) M - #*006x4# (define network port, x = So bus connection)
S - #*006x3# (define network port, x = So bus connection)
- 5) M - #*9999# (SYSTEM RESET)

You can now program the system via the PC and the MASTER Euracom

